

AQUARIUM INSTRUCTIONS FOR USE

For Household Use Only

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE



Scan QR Code to View Video "Setting Up Your Fish Tank"



Children under the age of 13 should be supervised by an adult with the setup, maintenance and fish care

ISZ-1G&H-FFP

1. Your Aquarium

People of all ages enjoy looking at aquariums. Aside from the belief that an aquarium is beautiful, many also believe owning an aquarium can be relaxing, rewarding and a great conversation piece all at the same time. You will find you will have many enjoyable hours with your new aquarium and fish.

Included in your aquarium

1. One-Gallon Tank
2. Full Hood
3. LED Light



4. Rinsing Gravel and Decor

- Rinse materials under running water – aquarium, gravel, stones, plastic plants and other decorations, etc.
- Pour gravel into the bottom of the tank and spread gravel evenly.
- Add any rocks and/or decorations to the aquarium.



Gravel and Decorations are not included with this aquarium kit.

2. Important Instructions

- See IMPORTANT SAFETY INSTRUCTIONS SECTION before operating this unit.
- For household use only.
- Confirm your tank has not been damaged during shipping before you start the setup process.
- Completely install aquarium before operating.
- This unit is powered by 2 AA batteries or by a SW Products 5V Power Adapter (AQ51000), neither are included in this kit.



5. Battery Requirements

WARNING:

- Do not mix old and new batteries.
- Do not mix Alkaline, Standard or Rechargeable Batteries.

LED light uses 2 AA batteries.

Note battery position and orientation



TIMER SELECTION SWITCH with 3 settings you can select:

- Continuous On *
- 2 Hour Duration (2H)
- 4 Hour Duration (4H)

3. Tank Placement

Recommendations for proper placement of your aquarium. Leave enough space in back of the aquarium to allow easy access to the filter and various electrical cords from the electrical equipment.

Good places for your aquarium

- On a table or aquarium stand that's capable of bearing the weight of your filled aquarium.

Places to avoid

- Near direct sources of sunlight (e.g. windows), unwanted algae growth may occur.
- Near direct sources of heat (e.g. radiator, forced air vent).
- Around sources of noise (e.g. stereo speakers, TV).
- Drafty areas.
- Do not place aquarium on any good surface that can be damaged by water.
- Where water can come in contact with other electrical appliances.



6. LED Light

- To turn on LED light press the blue button switch on top of the light.

- Continue to press the blue button until desired color is located. 7 colors to choose from; amber, aqua, blue, green, purple, red and white.



Optional SW Products 5V Power Adapter (AQ51000) can be purchased separately online, eliminates the need for batteries, enabling the LED light to be plugged into 120V electrical outlet.



7. Adding Water

- Fill the aquarium with water to within one inch from the top of the tank. Do not overfill since spillage may occur.
- Add a water conditioner to your aquarium if you are using municipal water to remove chlorine and other tap water chemicals that can be harmful to your fish. You can purchase a tap water conditioner online.
- Confirm water temperature in aquarium has reached room temperature, recommended 70 to 78 degrees temperature.



8. Optional Heater

- (Optional) If you are adding a submersible heater, install it now.
- Read and follow the heater's instructions.
- Check with your retailer for recommended heater settings.
- Adjust heater settings as directed.



Heater not included,
must be purchased

9. Introducing Fish

- Float the bag with your fish on the surface of the aquarium for 15 minutes.
- Open the bag containing your new fish, taking care that the bag does not collapse, and add a little aquarium water every two minutes directly to bag.
- Continue this process for 10 minutes, allowing the bag to fill with water.
- Take bag with fish to sink and gently scoop fish out with a net or pour bag of water into net and place fish into aquarium. Do not add water from fish bag in order to prevent introduction of possible disease or parasites from store water.

10. Maintenance

- Perform a 25% water change monthly (more frequently if necessary depending on number of fish and amount of daily feedings), use a vacuum gravel to siphon off uneaten food and waste buildup.
- Use a tap water conditioner when adding water.
- Allow the water to sit overnight to acclimate to room temperature.

LED LIGHT FCC COMPLIANT



FCC Verification Tested

Certificate Of Conformity

PRSZ18052305E

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

LIMITED WARRANTY

SUNNYWAY ENTERPRISES, INC warrants this aquarium product to be free from defects in material and workmanship under normal use and service and according to the provisions as specified in the accompanying assembly and operating instructions, for a period of 1 year from date of purchase.

This warranty does not cover and SUNNYWAY ENTERPRISES, INC is not liable for the cost of repair or replacement of parts which have been subject to misuse, negligence, accident, improper installation, damage during shipment or handling, normal deterioration due to wear and exposure or defects caused by unauthorized parts or modification.

UNDER NO CIRCUMSTANCES WILL SUNNYWAY ENTERPRISES, INC BE LIABLE FOR ACCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROPERTY OR EQUIPMENT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you the legal rights, which vary from state to state.

**WARRANTY HELP
REPLACEMENT PARTS
OR
TECH SUPPORT**

**IF ANY COMPONENTS ARE
DAMAGED OR MISSING
DO NOT RETURN TO THE RETAILER
CONTACT**



customerservice@sunnywaycn.com



www.sunnywaycn.com

Manufactured by SUNNYWAY ENTERPRISES, INC
TUSTIN, CA92782 USA