



SCHEDULE

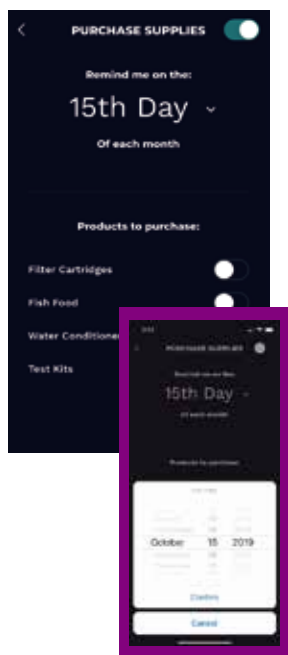

Purchase Supplies Alert

STEP 1 Schedule day of month, scroll with your finger or cursor to "Remind me on the:" > "Pick a day" > press "Confirm".

SCHEDULE

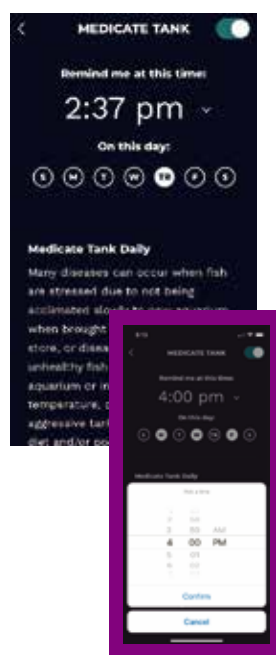


Medicate Tank Alert

STEP 1 Schedule time of day, scroll with your finger or cursor to "Remind me at this time:" > Hours > and/or Minutes > AM or PM.

STEP 2 To schedule which day or days to "Medicate Tank" scroll with your finger or cursor to "On this day" > Days.

SCHEDULE

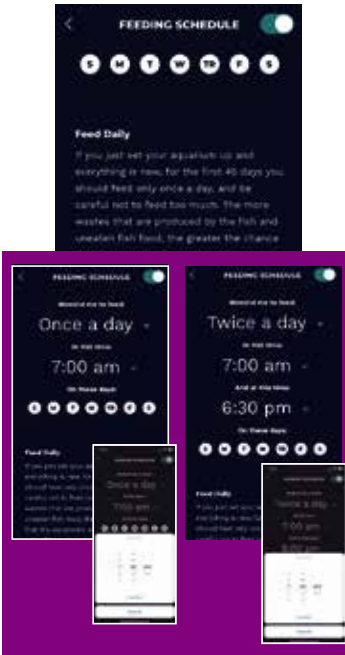


Feeding Schedule Alert

STEP 1 Schedule the number of times to feed per day, scroll with your finger or cursor to "Remind me to feed" > "Once a day or Twice a day".

STEP 2 Schedule time of day, scroll with your finger or cursor to "At this time:" > Hours > and/or Minutes > AM or PM.

STEP 3 To schedule which day or days to "Feed" scroll with your finger or cursor to "On these day" > Days.

SCHEDULE

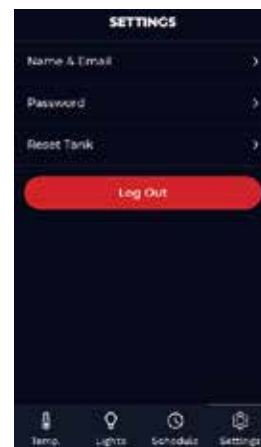

STEP 1 Log Out

To "Log Out" of Smart Tank, scroll with your finger or cursor to "Log Out" and click on it.

STEP 2 Log Onto Smart Tank™

Scroll with your finger or cursor to "Name & Email > Password. Enter information.

SCHEDULE

STEP 3 Reset Smart Tank™

- Scroll with your finger or cursor to "Reset Tank > click on "Reset".
- Scroll with your finger or cursor to "Name & Email > Password > enter information > go to "Pairing Your Phone to Smart Tank".
- Turn Aquarium Light on and select Pairing Setting. LED light will begin blinking rapidly.
- Press "Pair Smart Tank" on your phone.
- Once paired successfully, Smart Tank will blink once with a solid color to confirm successful pairing.



START GUIDE

Smart Tank™ by
Koller Products App
User Guide

Children under 13
are to be supervised
by an adult.

GOT QUESTIONS?
Go to www.kollerproducts.com
or email
customer@kollerproducts.com

SETTING YOUR SCHEDULES

ISZ-100-BSCD

QUICK START GUIDE

iOS Setup

STEP 1 Plug it in!

Insert the power adapter connector cable into the port at the back of the hood, then plug it into the electrical outlet.

STEP 2 Launch the app!

Download Smart Tank™ by Koller Products app from App Store > create account, fill out customer information.

STEP 3 Connect!

Pair your iOS device to Smart Tank light > connect to WiFi.

STEP 4 Discover Successful Fish Keeping!

Follow the on-screen instructions to finish connecting your Smart Tank to your iOS device.

ANDROID Setup

STEP 1 Plug it in!

Insert the power adapter connector cable into the port at the back of the hood, then plug it into the electrical outlet.

STEP 2 Launch the app!

Download Smart Tank™ by Koller Products app from Google Play > create account, fill out customer information.

STEP 3 Connect!

Pair your Android to Smart Tank light > connect to WiFi.


STEP 4 Discover Successful Fish Keeping!

Follow the on-screen instructions to finish connecting your Smart Tank to your Android device.

GOT QUESTIONS?

Go to www.kollerproducts.com
or email
customer@kollerproducts.com

SCHEDULE

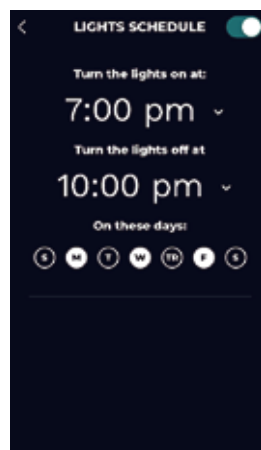


Schedule Lights On

STEP 1 Move "Lights" switch located on the right side to ON (right) and click on "Lights".

STEP 2 To schedule lights to turn on go to "Turn the lights on at" and scroll with your finger or cursor to select "Days > Hours > and/or Minutes". AM or PM.

To schedule lights to turn off go to "Turn the lights off at" and scroll with your finger or cursor to select "Days > Hours > and/or Minutes". AM or PM.


SCHEDULE

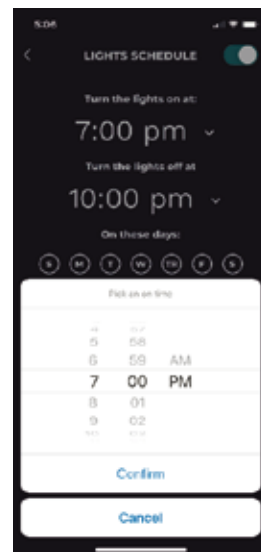

Schedule Lights Off

STEP 3 To schedule lights to turn off go to "Turn the lights off at" and scroll with your finger or cursor to select "Days > Hours > and/or Minutes". AM or PM.

SCHEDULE

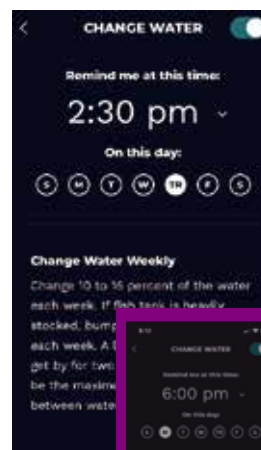


Change Water

STEP 1 Schedule time of day, scroll with your finger or cursor to "Remind me at this time:" > Hours > and/or Minutes > AM or PM.

STEP 2 To schedule water changes scroll with your finger or cursor to "On this day" > Days.

SCHEDULE

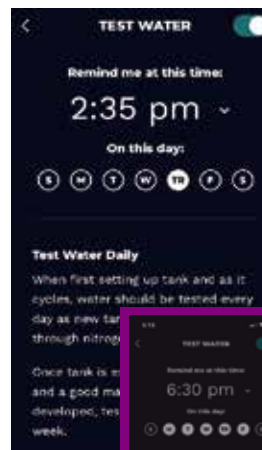


Test Water Alert

STEP 1 Schedule time of day, scroll with your finger or cursor to "Remind me at this time:" > Hours > and/or Minutes > AM or PM.

STEP 2 To schedule which day or days to "Test Water" scroll with your finger or cursor to "On this day" > Days.

SCHEDULE

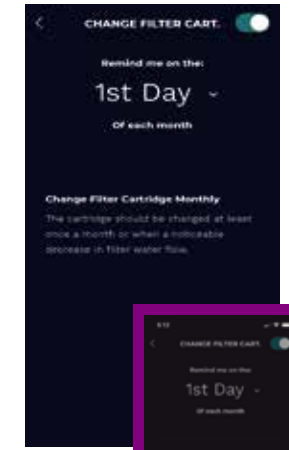

Change Filter Cartridge Alert

STEP 1 Schedule time of day, scroll with your finger or cursor to "Remind me at this time:" > Day > Confirm.